


Stainless Steel WIRE ROPE INFILLS

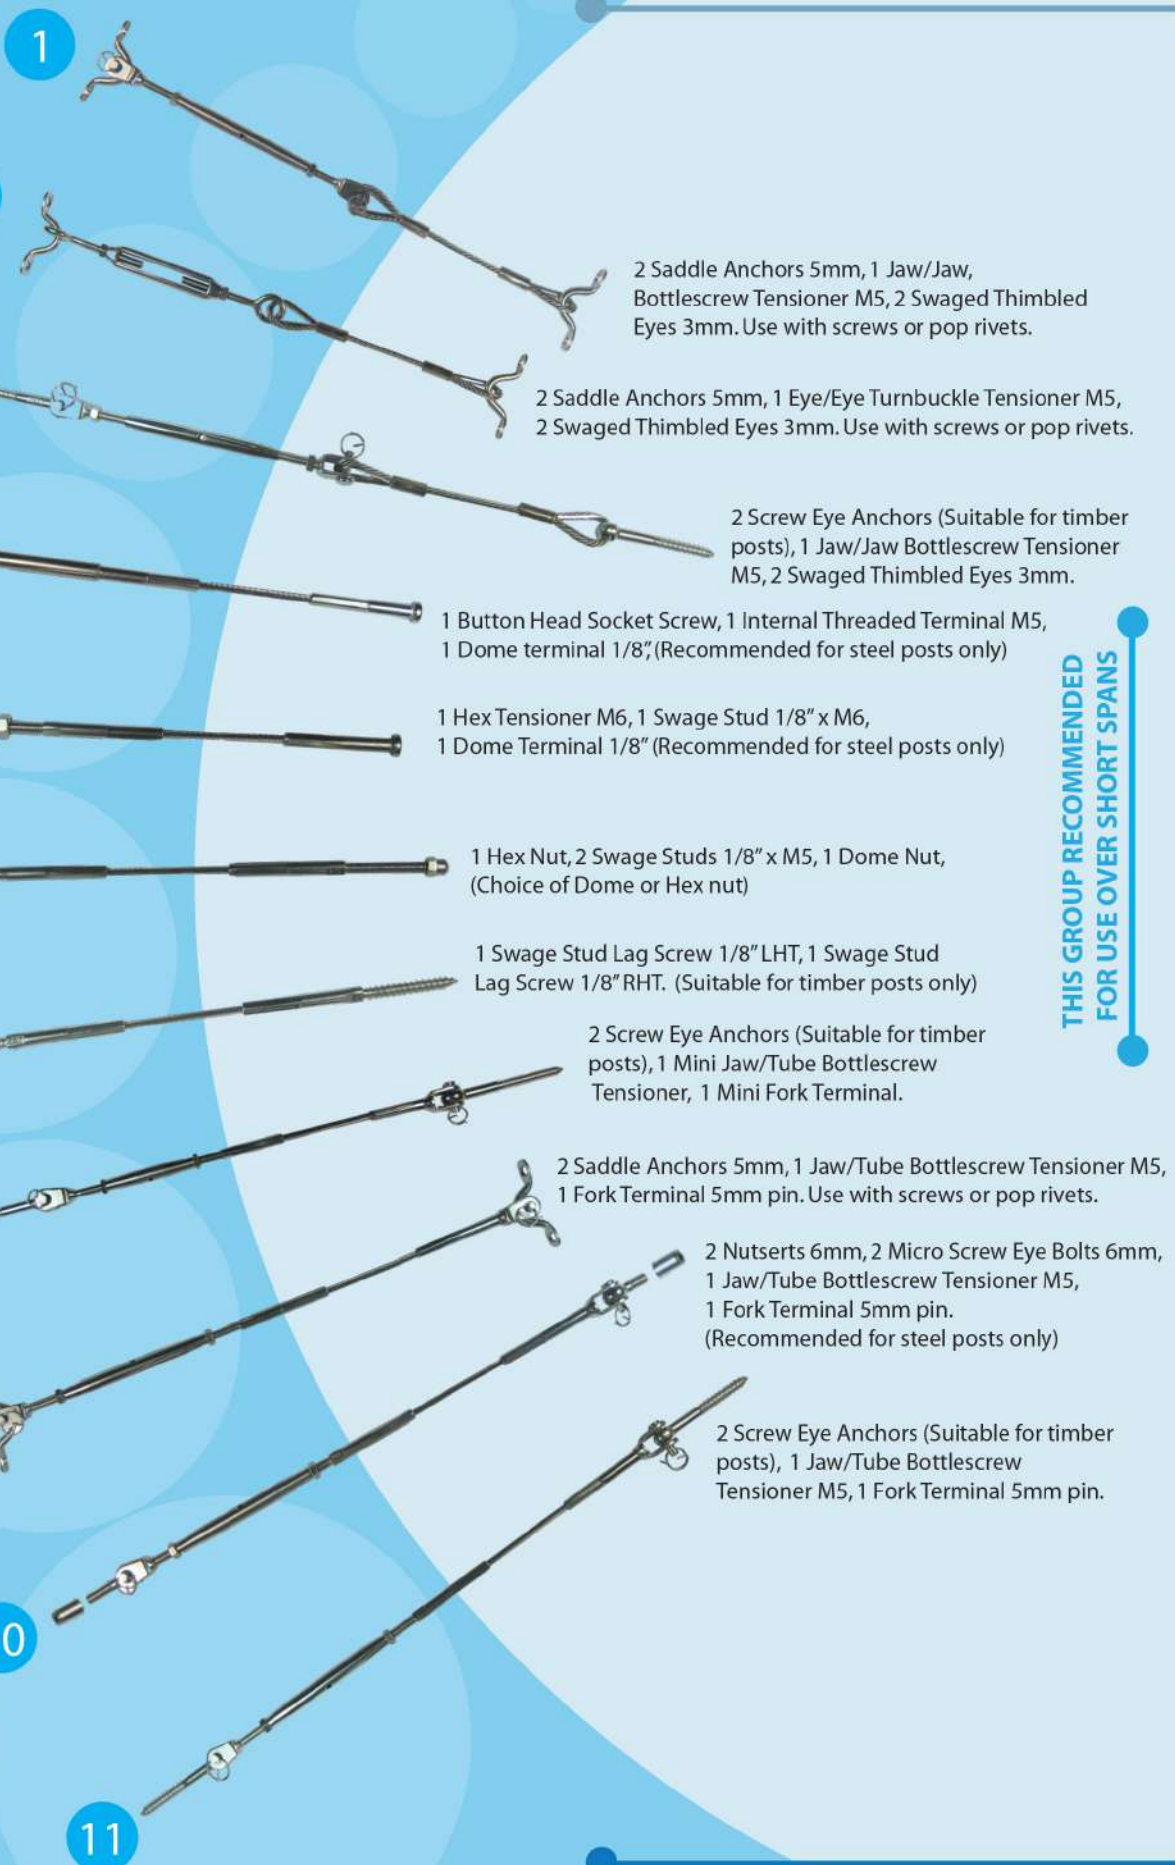

1

2

3

4

5

6

7

8

9

10

11

2 Saddle Anchors 5mm, 1 Jaw/Jaw, Bottlescrew Tensioner M5, 2 Swaged Thimbled Eyes 3mm. Use with screws or pop rivets.

2 Saddle Anchors 5mm, 1 Eye/Eye Turnbuckle Tensioner M5, 2 Swaged Thimbled Eyes 3mm. Use with screws or pop rivets.

2 Screw Eye Anchors (Suitable for timber posts), 1 Jaw/Jaw Bottlescrew Tensioner M5, 2 Swaged Thimbled Eyes 3mm.

1 Button Head Socket Screw, 1 Internal Threaded Terminal M5, 1 Dome terminal 1/8" (Recommended for steel posts only)

1 Hex Tensioner M6, 1 Swage Stud 1/8" x M6, 1 Dome Terminal 1/8" (Recommended for steel posts only)

1 Hex Nut, 2 Swage Studs 1/8" x M5, 1 Dome Nut, (Choice of Dome or Hex nut)

1 Swage Stud Lag Screw 1/8" LHT, 1 Swage Stud Lag Screw 1/8" RHT. (Suitable for timber posts only)

2 Screw Eye Anchors (Suitable for timber posts), 1 Mini Jaw/Tube Bottlescrew Tensioner, 1 Mini Fork Terminal.

2 Saddle Anchors 5mm, 1 Jaw/Tube Bottlescrew Tensioner M5, 1 Fork Terminal 5mm pin. Use with screws or pop rivets.

2 Nutserts 6mm, 2 Micro Screw Eye Bolts 6mm, 1 Jaw/Tube Bottlescrew Tensioner M5, 1 Fork Terminal 5mm pin. (Recommended for steel posts only)

2 Screw Eye Anchors (Suitable for timber posts), 1 Jaw/Tube Bottlescrew Tensioner M5, 1 Fork Terminal 5mm pin.

SUITABLE FOR 7X7 WIRE ROPE

THIS GROUP RECOMMENDED FOR USE OVER SHORT SPANS

SUITABLE FOR 1X19 WIRE ROPE